

AC Current Transducer AT-B5

Split-core transducer for the electronic measurement of AC waveform currents, with galvanic separation between the primary circuit and the secondary circuit. 0-5 V DC switch voltage output proportional to the RMS value of the primary current.



Elec	trical data					
Primary r RMS curi		out voltage	Т	ype		
I_{PN} (At RI	MS) U	J _{out} (V DC)				
	5	0-5	A	T 5 B5		
•	10	0-5	A	AT 10 B5		
2	20	0-5	A ⁻	AT 20 B5		
;	50	0-5	A ⁻	AT 50 B5		
	100	0-5	Α	AT 100 B5		
R_{L}	_oad resistance		≥	1 MΩ		
U_{C}	Supply voltage		se	self-powered		
U_{SZ}	Output clamping vo	ltage	7.	5 V		
\hat{I}_{p}	Overload capability	- continuous	12	20 % of I_{PN}		
		- 1 min	15	50 % of I_{PN}		
Performance data						
ε	Error @ I_{PN} , T_{Δ} = 25 °C (excluding offset)			±1.5 % of I_{PN}		
$arepsilon_{L}$	_inearity error		<	± 0.5 % of I_{PN}		

BW	Frequency bandwidth	T N	50/60	Hz
Ge	neral data			
$T_{ m A}$ $T_{ m Ast}$ RH	Ambient operating temperature Ambient storage temperature Relative humidity (non-condensing) 1) Altitude above sea level		-20 +60 -20 +85 ≤ 85 2000 Indoor use only	°C °C % m
m IPxx	Mass Protection degree		90 IP 40	g

Delay time to 90 % of the final output value for I_{PN} step ≤ 300

Notes: 1) Long term exposure to high humidity environment may affect to product reliability.

Deviation of the output during test IEC 61000-4-3 @ 10 V/m between 280 to 500 MHz.





Features

- RMS (average) output
- 0-5 V DC voltage output
- Split-core type
- Ø 16 mm sensing aperture for non-contact measurement
- Terminal output
- Insulating plastic case recognized according to UL 94-V0.

Advantages

- High insulation between primary and secondary circuits
- Compact case
- · Cost-effective solution
- · Easy installation.

Applications

ms

- Automation and Supervision
 Current measurement for process regulation by distributed PLCs or remote control (e.g. SCADA software)
- Safety and Condition
 Monitoring
 Load monitoring for protection
 systems and predictive
 maintenance (e.g. conveyers,
 pumps or HVAC motors).

Application domains

- Energy
- Automation.

 $t_{\rm D\,90}$



Current Transducer AT-B5

Insulation coordination

T 7	Poted inculation PMS voltage 1)		
U_{Nm}	Rated insulation RMS voltage ¹⁾ , reinforced or basic insulation	300	V
	with IEC 61010-1 standards and following conditions		V
	- Reinforced insulation	.	
	- Over voltage category CAT III		
	- Pollution degree PD2		
	- Heterogeneous field		
U_{d}	RMS voltage for AC insulation test 2), 50 Hz, 1 min	3.5	kV
ű		Min	
$d_{\rm Cp}$	Creepage distance	6	mm
d_{Cl}	Clearance	6	mm
CTI	Comparative tracking index (group I)	600	

Notes: 1) If insulated cable is used for the primary circuit, the voltage category could be improved according to the insulation coordination given by the cable manufacturer

²⁾Between primary (completely filling the hole) and secondary.



Safety and warning notes

In order to guarantee safe operation of the transducer and to be able to make proper use of all features and functions, please read these instructions thoroughly! Safe operation can only be guaranteed if the transducer is used for the purpose it has been designed for and within the limits of the technical specifications. Ensure you get up-to-date technical information that can be found in the latest associated datasheet under www.lem.com.



Caution! Risk of danger

Ignoring the warnings can lead to serious injury and/or cause damage! The electric measuring transducer may only be installed and put into operation by qualified personnel that have received an appropriate training.

The corresponding national regulations shall be observed during installation and operation of the transducer and any electrical conductor. The transducer shall be used in electric/electronic equipment with respect to applicable standards and safety requirements and in accordance with all the related systems and components manufacturer' operating instructions.



Caution, Risk of electrical shock

When operating the transducer, certain parts of the module may carry hazardous live voltage (eg. primary conductor, power supply). The user shall ensure to take all measures necessary to protect against

The user shall ensure to take all measures necessary to protect against electrical shock. The transducer is a build-in device containing conducting parts that shall not be accessible after installation.


A protective enclosure or additional insulation barrier may be necessary. The transducer shall not be put into operation if the jaw opening is open (split core version) or the installation is not completed.

Installation and maintenance shall be done with the main power supply disconnected except if there are no hazardous live parts in or in close proximity to the system and if the applicable national regulations are fully observed.

Safe and trouble-free operation of this transducer can only be guaranteed if transport, storage and installation are carried out correctly and operation and maintenance are carried out with care.



Dimensions AT-B5 (in mm)

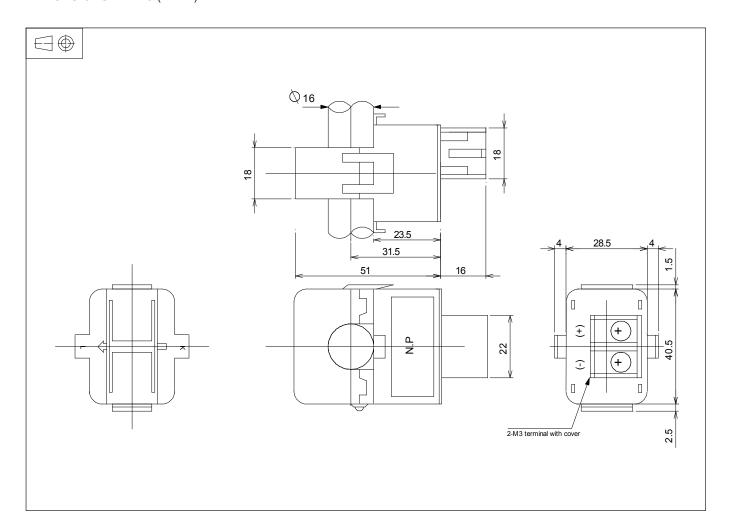

Mechanical characteristics

- General tolerance
- Primary aperture
- Fastening


Connections


• Wires up to 2 mm Ø

±1 mm Ø 16 mm Cable tie

Remark

• Attention: contact areas (air gap) must be kept clean (particle free) to ensure proper performance.

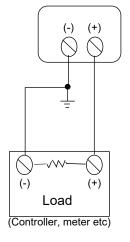

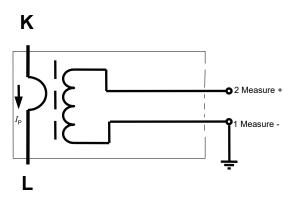

Page 4/4